SEL-787-2/-3/-4

Transformer Protection Relay



The only compact platform with REF and up to four-terminal differential protection

- Dual-slope percentage differential protection with harmonic blocking and restraint enhances security.
- User-configurable restricted earth fault (REF) element provides sensitive ground-fault detection in grounded-wye transformers.
- The 5-inch, 800 × 480 color touchscreen display allows direct monitoring and control of your system.
- Optional single-phase voltage input for synchronism check or station battery monitor.
- The Rapid Spanning Tree Protocol (RSTP) provides alternate paths in a network to improve network recovery.



Key Features

Differential Protection

The SEL-787-2/-3/-4 provides dual-slope differential protection with harmonic blocking and restraint for as many as four terminals and provides as many as three independent REF elements for sensitive ground-fault detection in grounded-wye transformers. Standard overcurrent elements in the SEL-787-2/-3/-4 provide backup protection, including phase, negative-sequence, residual-ground, and neutral-ground elements. You can select breaker failure protection for as many as four three-pole breakers.

Transformer Monitoring

Measure and track accumulated through-fault current levels, and use optional 4 to 20 mA inputs or resistance temperature detector (RTD) thermal inputs to monitor ambient, load tap changer (LTC) tank, or transformer oil temperatures.

Flexible Communications

Advanced protocols support communications using legacy and modern supervisory and control systems. These protocols include IEC 61850 Edition 2, RSTP, EtherNet/IP, the IEEE 1588 Precision Time Protocol (PTP) (firmware-based), IEC 60870-5-103, the Parallel Redundancy Protocol (PRP), Modbus (RTU and TCP/IP), the Simple Network Time Protocol (SNTP), DNP3 (serial and LAN/WAN), ASCII, Telnet, and the File Transfer Protocol (FTP). In addition, the IEC 61850 test mode in the SEL-787-2/-3/-4 enables in-service testing, which reduces commissioning time.


Proven Hardware


The SEL-787-2/-3/-4 operates in extreme conditions, with an operating temperature range of -40° to +85°C (-40° to +185°F). It is designed to work in harsh substation environments and is tested to verify that it exceeds requirements for reliable operation in the presence of vibration, electromagnetic interference, and other adverse environmental conditions. Optional conformal coating provides extra protection in caustic environments. In addition, the SEL-787-2/-3/-4 is ATEX-certified and Underwriters Laboratories (UL) Class I, Division 2-certified for use in hazardous and potentially explosive environments.







Functional Overview

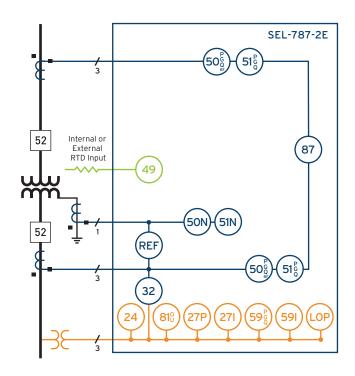

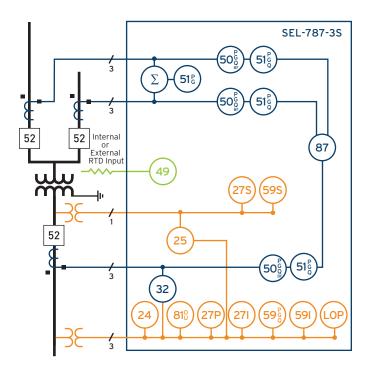

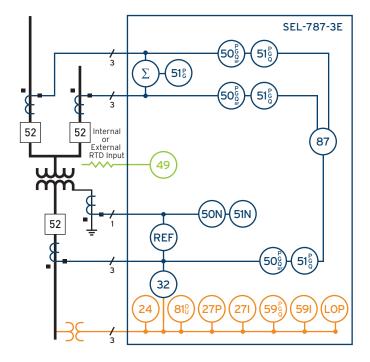

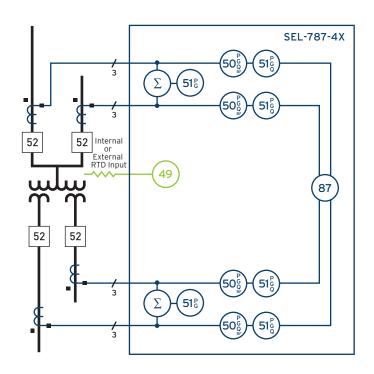

Model F	eatures	SEL-787-2X	SEL-787-21	SEL-787-2E	SEL-787-3E	SEL-787-3S	SEL-787-4X
Windings F	Protected	2	2	2	3	3	4
CT/PT Inpu	uts						
Phase Volt	age Inputs	0	0	3	3	3	0
Differentia	I Current Inputs	6	6	6	9	9	12
Neutral Cu	rrent	0	1	1	1	0	0
VS/VBAT C	Channel	0	0	0	0	1	0
Protection	Elements						
24	Volts/Hertz			٠	٠	٠	
25	Synchronism Check					•	
271	Inverse Time Undervoltage (Phase, Phase-to-Phase, Sequential, Vsync)			•	•	•	
27P	Undervoltage (Phase) With Inverse Characteristic			٠	٠	٠	
27PP	Phase-to-Phase Undervoltage			•	•	•	
27S						•	
32	32 Directional Power			٠	٠	٠	
49	RTDs	٠	٠	٠	٠	٠	•
50N	Neutral Overcurrent		٠	٠	٠		
50 (P,G,Q, BF)	Overcurrent (Phase, Ground, Neg. Seq, Breaker Failure)	•	•	•	•	•	•
51 (P,G,Q)	Time-Overcurrent (Phase, Ground, Neg. Seq.)	•	•	•	•	•	•
51N	Neutral Time- Overcurrent		•	٠	٠		
51PC	Combined Winding Phase Time-Overcurrent				•	•	•
51GC	Combined Winding Ground Time- Overcurrent				•	•	•
59 (P,G,Q)	Overvoltage (Phase, Ground, Neg. Seq.)			٠	•	•	
591	Inverse Time Overvoltage (Phase, Phase-to-Phase, Sequential, Vsync)			•	٠	•	
595	Overvoltage (Synchronism or Battery Voltage)					•	
81 (O,U)	Over-/Underfrequency			•	•	٠	
87	Phase Differential	•	•	٠	٠	٠	•


Model Fe	atures	SEL-787-2X	SEL-787-21	SEL-787-2E	SEL-787-3E	SEL-787-3S	SEL-787-4X
	and REF Elements						
(Standard)	Protection Windings	2	2	2	3	3	4
REF Elemer	nts (Standard)	0	1	1	1	0	0
	Protection Windings Configured for REF)				2	2	3
REF Elemer (Winding 3	nts Configured for REF)				2	2	2
Additional							
85RIO	SEL MIRRORED BITS [®] Communications	•	•	•	•	•	•
BF	Breaker Failure	•	•	•	•	•	•
BW	Breaker Wear Monitoring	٠	•	•	•	•	٠
DFR	DFR Event Reports			٠	٠	٠	٠
ENV	SEL-2600 RTD Module Support*	•	•	•	•	•	•
LDP	Load Data Profiling	•	•	•	•	•	•
LGC	SELogic [®] Control Equations	•	•	•	•	•	•
LOP	Loss of Potential			٠	٠	٠	
MET	High-Accuracy Metering	•	•	٠	•	•	٠
RTD	10 Internal or 12 External (see ENV) RTD Inputs*	•	•	•	•	•	•
REF	Restricted Earth Fault		•	•	•	•	•
RTU	Remote Terminal Unit	•	•	•	•	•	•
SER	Sequential Events Recorder	•	•	•	•	•	•
TFE	Through-Fault Event Monitor	•	•	•	•	•	•
PMU	Synchronized Phasor Measurement	•	•	•	•	•	•
WEB	Web Server	•	•	•	•	•	•

*Optional feature

Product Overview



User-configurable label kit.

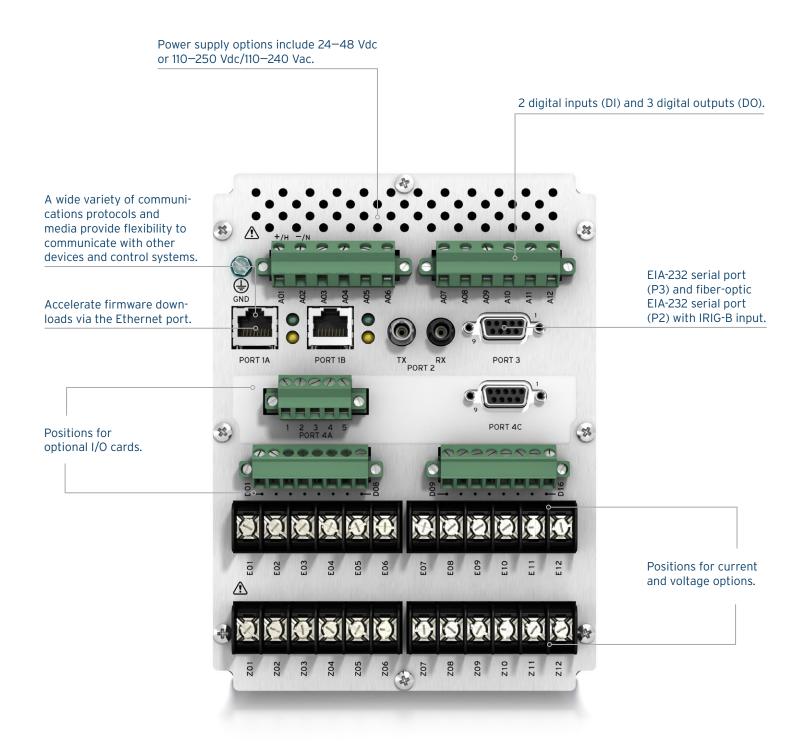

Touchscreen Overview

The 5-inch diagonal color display with a resolution of 800×480 pixels offers direct navigation via a capacitive touchscreen.



Folders and applications provide quick access to bay screens, metering and monitoring data, reports, settings, and more.

The front panel is available in English or Spanish.

Touchscreen Display Features and Functions

The SEL-787-2/-3/-4 5-inch, 800 × 480 color touchscreen display provides a one-line diagram mimic display for bay control and monitoring. You can view metered quantities, phasor diagrams, relay settings, event summaries, target statuses, and SER data.

Bay Screens and Bay Control

Select from predefined bay screens, or configure as many as five custom bay screens using AcSELERATOR® Bay Screen Builder SEL-5036 Software and AcSELERATOR QuickSet® SEL-5030 Software. With the bay screen, you can control as many as 4 breakers, 16 two-position disconnects, and 2 three-position disconnects and can view analog and digital data in a contextual display.


To control a breaker, simply tap the Bay Screens application on the home screen and then the breaker you want to control.

Next, enter your Level 2 password and tap Submit. The onscreen keyboard allows you to quickly and easily enter passwords.

Вау	Screen 1		10/18/	2019	04:2	21:12
Ð	RID : SEL-787-3 TID : TRNSFRMI		V01A			
		СВ01 📕	IAW1:	502	А	
		SW01B	IBW1:	501	А	
	FAN1 : ON FAN2 : OFF	y have a second s	ICW1:	500	А	
	FAINZ . OFF	SW02B	IAW2 :	100	А	
$\mathbf{\lambda}$		СВ02	IBW2:	99	А	
~	115 kV	SW02A o	ICW2 :	101	A	
		-		*	LR	ACC


Au	Authentication 09/10/2019 02:19:37							81									
Le	Level: 2AC								C,	ANC	EL						
Pas	assword: SUBMIT																
	Ş	۷	V	E	F	२	Т	١	(ι	J	Ι		C	>	Ρ	
	ŀ	4	S		>	F	Ģ	5	ŀ	ł	-		K	:	L		
	abc		Z	>	<	С	V	/	E	3	Ν	J	N	1		×	
	123		#+	-=			Spa	ace					-			-	
Та	рC	ANC	CEL to	o go	bac	k.								×	LR	A	cc

Finally, tap Trip or Close to control the breaker. When asked to confirm the action before the operation is completed, choose Yes or No.

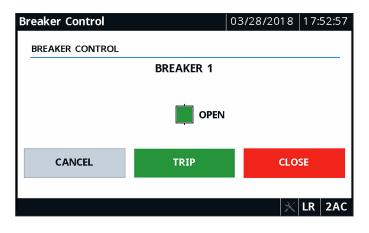

Meter Phasors

View a graphical and textual representation of the realtime voltages and currents in a power system during balanced and unbalanced conditions. By analyzing the phasors, you can determine power system conditions.

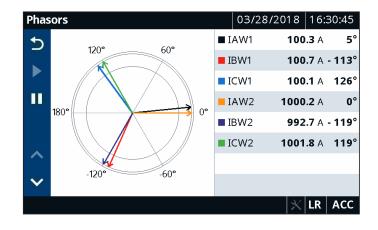

Meter Fundamentals

View the real, reactive, and apparent power of each phase in your system, and monitor the power factor information to determine if the phase current leads or lags the phase voltage.

Fund	amental Metering	05/10/2017 09:30:44
Ð	P (kW)	Q (kVAR)
	2990	1479
	S (kVA)	PF
^	3336	0.90 LAG
Powe	er quantities are shown for cur	rent winding 1. $ imes$ LR ACC

Meter Differential

View the operate and restraint currents for each differential element (87) of your transformer in multiples of TAP. You can use these quantities in conjunction with the phasors or fundamental metering screen to visualize the differential protection of your transformer and for commissioning exercises.

Diffe	erential Metering	05/10/2017	09:31:15	
5		87-1	87-2	87-3
	Operate (pu)	0.03	0.02	0.03
	Restraint (pu)	2.02	2.03	2.00
	2nd Harmonic (%)	0.00	0.00	0.00
	4th Harmonic (%)	0.00	0.00	0.00
	5th Harmonic (%)	0.00	0.00	0.00
			*	LR ACC

SEL-787-2/-3/-4 Options


Optional Communications and I/O Cards	Current and Voltage Input Cards	Model	
Serial communications card (EIA-232/-485)	6 currents (Slot Z)	SEL-787	
3 DI, 4 DO, 1 4–20 mA analog output (AO) 4 DI, 4 DO	6 currents (Slot Z) and 1 neutral current (Slot E)	SEL-787-	
8 DO	6 currents (Slot Z) and 1 neutral current, 3 voltages (Slot E)	SEL-787 SEL-787	
8 DI 14 DI	6 currents (Slot Z) and 3 currents, 1 neutral current,		
4 DI, 3 DO (2 Form C, 1 Form B) 4 analog inputs (AI), 4 AO	3 voltages (Slot E) 6 currents (Slot Z) and		
10 RTD inputs	3 currents, 3 voltages, 1 voltage (battery or synchronism check) (Slot E)	SEL-787-	
	6 currents (Slot Z) and 6 currents (Slot E)	SEL-787-	



Applications

Multiwinding Differential Transformer Protection

Provide dual-slope differential protection with harmonic blocking and restraint for transformers with as many as four three-phase terminals at power plants, transmission substations, distribution substations, and industrial plants. The relay allows you to choose harmonic blocking, harmonic restraint, or both, providing stability during transformer inrush conditions. Even-numbered harmonics (second and fourth) provide security during energization, while fifth-harmonic blocking provides security for overexcitation conditions.

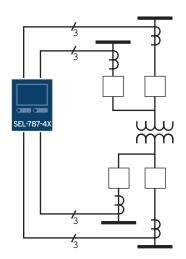

REF Protection


Provide sensitive detection of internal ground faults on grounded wye-connected transformer windings and autotransformers using the REF element. The number of REF elements available is model-dependent.

Protection Using Different Combinations of Nominal CT Inputs

For each transformer winding, you can order a 5 A or 1 A nominal CT input to match your application.


Standard Time-Overcurrent Protection

Standard overcurrent elements, including phase, negative-sequence, residual-ground, and neutralground elements, provide backup protection.

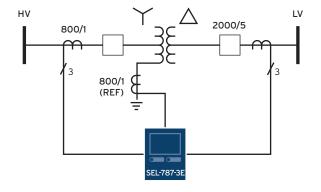


Through-Fault Monitoring

Track transformer wear with through-fault monitoring. Transformer through-fault monitoring lets you gather the current levels, through-fault duration, and date/time of each through fault. Through-fault currents can cause transformer winding displacement, leading to mechanical damage and increased transformer thermal wear. By monitoring through faults, you can schedule proactive maintenance based on the cumulative through-fault duty.

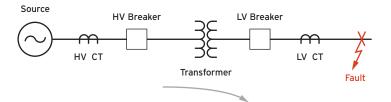

Circuit Breaker Monitor

The SEL-787-2/-3/-4 circuit breaker monitor feature compares the breaker manufacturer's maintenance curve to the measured (unfiltered) ac current at the time of trip and the number of close-to-open operations. The circuit breaker monitor feature helps in scheduling circuit breaker maintenance.

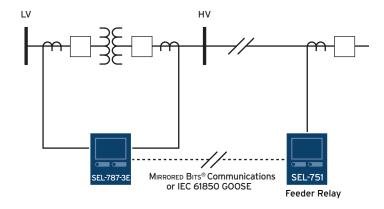

Protection Coordination

Use SEL MIRRORED BITS OF IEC 61850 GOOSE communications to coordinate with upstream protection.

Easy Information Access With the Integrated Web Server

Access basic SEL-787-2/-3/-4 information on a standard Ethernet network with the built-in web server. You can view the relay status, SER data, metering information, and settings with easy access within a local network. For increased security, web server access requires a relay password and the information is limited to a read-only view. You can also upgrade the relay firmware through the web server.

SEL SEL-787-4X TRNSFRMR RELAY	,							Wed, Aug 7, 2019 13:25 ACC [Logo
* Meter	SEL-787-4 Funda	mental M	etering					
Fundamental Thermal	SEL-787-4X TRNSFRMR RELAY				08/07/2019 ource: Inter	Time: 13: nal	25:26.003	Fundamental 50/60 Hz content only, no
Max/Min RMS Differential	Mag (A pri.) Angle (deg)	IAW1 9.9 0.0	IBW1 9.8 -121.2	ICW1 10.1 119.5	IGW1 0.3 105.4	11W1 9.9 -0.6	3I2W1 0.1 -24.8	harmonics.
Harmonics Remote Analogs	Mag (A pri.) Angle (deg)	IAW2 10.0 -1.4	IBW2 10.0 -121.8	ICW2 10.1 119.9	IGW2 0.3 178.7	I1W2 10.0 -1.1	3I2W2 0.3 -38.6	
Reports	Mag (A pri.) Angle (deg)	IAW3 9.9 0.7	IBW3 9.9 -121.2	ICW3 10.0 117.6	IGW3 0.6 72.7	11W3 9.9 -1.0	3I2W3 0.4 120.4	
Communications	Mag (A pri.) Angle (deg)	IAW4 9.8 0.7	IBW4 10.0 -118.9	ICW4 9.9 120.7	IGW4 0.1 -118.6	I1W4 9.9 0.8	312W4 0.4 -34.9	
 Relay Status Settings 	Frequency (Hz)	FREQ 60.00		11017	11010	0.0	54.5	

Integration and Language Support

Integrate relays using multiple protocol options, and securely manage local and remote access for protection, monitoring, and control. Through a secure serial or Ethernet network, you can centrally monitor and manage transformers, share data between substations, and integrate relays inside the control house. The relay is available with either Spanish or English interface options.

Supported protocols include:

- IEC 61850 Edition 2
- EtherNet/IP
- MIRRORED BITS communications
- IEC 60870-5-103
- Firmware-based PTP
- PRP
- SNTP
- DNP3
- Telnet
- Modbus
- FTP
- ASCII
- RSTP

⊨>>aju	r				
Reporte	e Ajustes de				
Criteri	io Activacion SER				
Activa	Auto Eliminacion (Y,N)		ESERDEL	:= N	?
SERn =	Arranques SER Hasta 24 elementos Relay- para dehabilitar el ajust		por espa	acios o comas	
SER1	:= 87R 87R1				
	:= TRIP				
	:= TRIPXFMR				
	:= SALARM				
ALIASn ado'. Texto A	; Relay-Word Bit = 'RW Bit'(espacio)Alias(Nias, Activado, Desactiva para desactivar ajuste.				exto Desactiv
ALIAS1 ?	ALIAS (N,1-20) := PB01 FP_LOCK PICKUP D	ROPOUT	EALIAS	:= 3	?
ALIAS2 ?	:= PB02 FP_CLOSE PICKUP	DROPOUT			
ALIAS3 ?	:= PB03 FP_TRIP PICKUP D	ROPOUT			
Ajustes	Reporte Eventos				
ER	AR EVENTO (SELogic) := 0				
	JD EVENTO (15,64,180 cic) JD PREFALLA (1-10 cic)			:= 15 := 1	? ?
FMRnNAM FMRN =	- Fst Msg R 1 = Caracteres validos. Hasta 24 Cantidades Analo para desactivar ajuste.	gicas separadas	por esp	pacios o coma	s.
Leer Fa	FMR1 (9 caracteres) ast Message FMR1 (24 canti := NA			:= FMR1	?
Nombre Leer Fa FMR2	FMR2 (9 caracteres) ast Message FMR2 (24 canti := NA			:= FMR2	?
?	FMR3 (9 caracteres)			:= FMR3	?



SEL-787-2/-3/-4 Specifications

G	eı	ne	ra	

General					
AC Current Inputs	5 A or 1 A nominal				
AC Voltage Inputs	300 Vac continuous, 600 Vac for 10 seconds				
Output Contacts	The relay supports Form A, B, and C outputs.				
Optoisolated Control Inputs	DC/AC control signals: 250, 220, 125, 110, 48, and 24 V				
Frequency and	System frequency: 50, 60 Hz				
Phase Rotation	Phase rotation: ABC, ACB				
	Frequency tracking: 15—70 Hz (requires ac voltage inputs)				
Communications Ports	Standard EIA-232 (2 ports) Location: front panel, rear panel Data speed: 300—38,400 bps				
	EIA-485 port (optional) Location: rear panel Data speed: 300—19,200 bps				
	Standard multimode fiber-optic serial port Location: rear panel Data speed: 300—38,400 bps				
	Ethernet port (optional) Single/dual 10/100BASE-T copper (RJ45 connector) Single/dual 100BASE-FX (LC connector)				
Communications Protocols	SEL (Fast Meter, Fast Operate, and Fast SER), Modbus TCP/IP, Modbus RTU, DNP3, FTP, IRIG-B, Telnet, SNTP, EtherNet/IP, firmware-based IEEE 1588 PTP, IEC 61850 Edition 2, IEC 60870-5-103, PRP, RSTP, MIRRORED BITS communications, and IEEE C37.118-2005 (synchrophasors).				
Processing Specification	AC voltage and current inputs: 32 samples per power system cycle				
	Protection and control processing: 4 times per power system cycle				
Power Supply	110—250 Vdc or 110—240 Vac Input voltage range: 85—264 Vac or 85—300 Vdc				
	24–48 Vdc Input voltage range: 19.2–60.0 Vdc				
Operating	-40° to +85°C (-40° to +185°F)				
Temperature	Note: Front-panel display contrast is impaired for temperatures below —20°C (—4°F) and above +70°C (+158°F).				
Certifications	To view certifications for the SEL-787-2/-3/-4, please visit				



Making Electric Power Safer, More Reliable, and More Economical +1.509.332.1890 | info@selinc.com | selinc.com

© 2022 by Schweitzer Engineering Laboratories, Inc. PF00325 • 20221024

