




# 1TPRI Installation Instructions

Before installation of fault indicators and sensors please read and understand all instructions in their entirety.

For assistance please contact Customer Service at: 1-847-362-8304 or by e-mail at: [info@selinc.com](mailto:info@selinc.com)

**Caution!** Install fault indicators and sensors in accordance with normal safe operating procedures. These instructions are not intended to replace or supersede existing safety or operating requirements. Only trained qualified personnel should install or operate fault indicators and sensors.

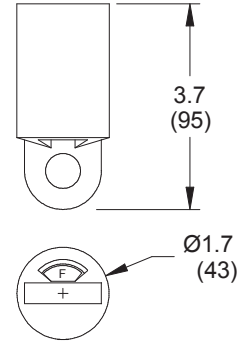

## Install the internal adapter ring (if required) and the phase sensor(s).

- Elastimold 15, 25, or 35kV PCE elbows having molded in test points require the internal adapter rings. Complete steps A - G
- HUBBELL, Chardon, RTE, Cooper, or GE-Chardon elbows with molded in test points do not require the adapter ring. Complete steps E - G only.

