

Instructions for Creating Part Numbers

Note: Please consult with your SEL representative on available displays and other configuration options before ordering.

To create a part number, select one code (in bold) from each column. List option codes in the order they appear, left to right.

SEL-CR Underground Current Reset Fault Indicator										
Phase	BEACON LED Option		SEL-CR Designation	Display	Nominal Trip Rating		Options			
1	–	No BEACON	CR	I Integral*	0050	50 A	–	No Options		
3	B	BEACON LED		V Standard Remote	0100	100 A	IR	Inrush Restraint		
				L Large Remote	0200	200 A	A	Auxiliary Contact		
				B Bolt	0300	300 A	DT	Delayed Trip (24 ms)		
				M Magnetic Probe (RadioRANGER® required)†*	0400	400 A	3	Three-Phase Reset**		
					0600	600 A	L	Large Core 1.8" to 2.5"		
					0800	800 A	W	Window-Mounting Kit for Large Remote Display		
					1000	1000 A				
					1200	1200 A				

Example part number: 1BCRBO400DT

The example part number is for a single-phase SEL-CR with a BEACON® LED, Bolt display, 400 A nominal trip rating, and delayed trip option.

*Not available with BEACON LED option.

†Not available with three-phase CR.

**Not available with single-phase CR.



Making Electric Power Safer, More Reliable, and More Economical
+1.509.332.1890 | info@selinc.com | www.selinc.com