

## Instructions for Creating Part Numbers

Note: Please consult with your SEL representative on available displays and other configuration options before ordering.

1. Select one code (in bold) from each column. List option codes in the order that they appear in the column.
2. Follow your usual process to issue a purchase order, or complete a specification for standards.

### Example part number: 1BCRBO400DT

The example part number is for a single-phase CR with a BEACON® LED, Bolt display, 400 A nominal trip rating, and delayed trip option.

CR Model Option Table							
Phase	BEACON LED Option	Current Reset Designation	Display	Nominal Trip Rating		Options	
<b>1</b>	– No BEACON	<b>CR</b>	<b>I</b> Integral*	<b>0050</b>	50 A	–	No Options
<b>3</b>	<b>B</b> BEACON LED		<b>V</b> Standard Remote	<b>0100</b>	100 A	<b>IR</b>	Inrush Restraint
			<b>L</b> Large Remote	<b>0200</b>	200 A	<b>A</b>	Auxiliary Contact
			<b>B</b> Bolt	<b>0300</b>	300 A	<b>DT</b>	Delayed Trip (24 ms)
			<b>M</b> Magnetic Probe (RadioRANGER® required)**	<b>0400</b>	400 A	<b>3</b>	Three-Phase Reset**
				<b>0600</b>	600 A	<b>L</b>	Large Core 1.8" to 2.5"
				<b>0800</b>	800 A	<b>W</b>	Window-Mounting Kit for
				<b>1000</b>	1000 A		Large Remote Display
			<b>1200</b>	1200 A			

\*Not available with BEACON LED option.

†Not available with three-phase CR.

#Not available with single-phase CR.