

INSTRUCTIONS FOR CREATING PART NUMBERS

1. Select one code (in bold) from each column. List option codes in the order that they appear in the column.
2. Follow your usual process to issue a purchase order, or complete a specification for standards.

UNDERGROUND AUTORANGER—SINGLE-PHASE						
Single-Phase	BEACON LED Option	Underground AutoRANGER Designation	Display	Current Activated Timed Reset Duration	Options	Factory Code
1	— No BEACON	ARU	I Integral	0 0 hrs (default)	— No Options	Y2
	B BEACON LED		V Standard Remote	2 2 hrs	L Large Core 1.8" to 2.5"	
			L Large Remote	4 4 hrs	W Window-Mounting Kit for Large Remote Display	
			B Bolt	8 8 hrs		
				12 12 hrs		

UNDERGROUND AUTORANGER—SINGLE-PHASE, FIBER-OPTIC DISPLAY							
Single-Phase	BEACON LED Option	Underground AutoRANGER Designation	Display Type Option	Timed Reset Period	Options	Display Lead Length	Factory Code
1	B BEACON LED	ARUZ	R Remote Fiber-Optic	0 None	— No Options	— No Lead (Integral Display Only)	Y2
			I Integral	2 2 hrs	L Large Core 1.6" to 2.5"	G 6 ft	
				4 4 hrs		C 8 ft	
				8 8 hrs		E 10 ft	
						H 15 ft	
						Q 20 ft	

Selection of fiber-optic BEACON display option will change product functionality. Consult SEL for details.

Example Part Number: **1ARUIOY2**

UNDERGROUND AUTORANGER—THREE-PHASE		
BEACON Bolt Display Time-Out Duration	BEACON Bolt Display Lead Length	Part Number (select one)
4 hour	6 feet	3BARUBOY2T4X1
4 hour	10 feet	3BARUBOY2T4X3
4 hour	20 feet	3BARUBOY2T4X2
8 hour	15 feet	3BARUBOY2T8X4