

INSTRUCTIONS FOR CREATING PART NUMBERS

1. Select one code (in bold) from each column. List option codes in the order that they appear in the column.
2. Follow your usual process to issue a purchase order, or complete a specification for standards.

UNDERGROUND SECONDARY/LOW-VOLTAGE RESET							
Underground Phase Designation	BEACON LED Option	Secondary Reset Designation	Display	Nominal Trip Rating		Options	
1 Single-Phase	— No BEACON	SR	I Integral	0050	50 A	—	No Options
3 Three-Phase	B BEACON LED**		V Standard Remote	0100	100 A	IR	Inrush Restraint
			L Large Remote	0200	200 A	RR	Reset Restraint
			B Bolt	0300	300 A	A	Auxiliary Contact
				0400	400 A	DT	Delayed Trip (24 ms)
				0600	600 A	W	Window-Mounting Kit for Large Remote Display
				0800	800 A		
1000	1000 A						
1200	1200 A						

**Not available with "I" display.

Example Part Number: **1BSRV0100IR**