

Instructions for Creating Part Numbers

Please consult with your SEL representative on available displays and other configuration options before ordering.

1. Select one code (in bold) from each column. List option codes in the order that they appear in the column.
2. Follow your usual process to issue a purchase order, or complete a specification for standards.

Example part number: 3BTPRV0200IRD

Test Point Reset (TPR) Model Option Table							
Phase	BEACON LED Option	TPR Designation	Display	Nominal Trip Rating		Inrush Restraint	Options
1	- No BEACON	TPR	I Integral*	0060	60 A	IR	- No Options
3	B BEACON LED		V Standard Remote	0080	80 A		A Battery-powered auxiliary contact**
			L Large Remote	0100	100 A		DT Delayed Trip (24 ms)
			B Bolt	0160	160 A		J 200 A-Class Junction Shields [†]
			M Magnetic Probe (RadioRANGER required)	0200	200 A		J6 600 A-Class Junction Shields [†]
				0250	250 A		W Window-Mounting Kit for Large Remote Display
				0300	300 A		
				0400	400 A		
				0450	450 A		
				0600	600 A		
				0800	800 A		
				1000	1,000 A		
				1200	1,200 A		

*Only available with single-phase TPR.

**Not available with "I" display.

[†]Required ≤200 A trip ratings. Suggested for junction enclosure applications or when phase distinction is required.

[‡]Required on 600 A-class elbows when applied to junction applications.

Please consult with your SEL representative on available displays and other configuration options before ordering.