

Instructions for Creating Part Numbers

Note: Please consult with your SEL representative on available displays and other configuration options before ordering.

To create a part number, select one code (in bold) from each column. List option codes in the order they appear, left to right.

SEL-MR Manual Reset Fault Indicator			
Manual Reset Designation	Nominal Trip Rating	Options (Pick One or More)	
MR*	0100	100 A [‡]	— Outside Diameter Cable Clamping Range up to 1.25"
	0200	200 A	L Outside Diameter Cable Clamping Range of 0.8" to 2.0"
	0400	400 A	K Kit Case (3 MR Fault Indicators and 1 MT Reset Tool in Hard-Sided Carrying Case)
	0450	450 A	
	0800	800 A	

*Please note that the Manual Reset Tool is required for this model and is ordered separately using part number MT.

[‡]MR0100 is appropriate for a 1.0" maximum cable diameter and is not available with the "L" option.

Example part number: MR0450LK

The example part number is for an MR with a 450 A nominal trip rating with an outside diameter cable clamping range of 0.8" to 2.0" in a kit configuration.

SEL-MR Manual Reset Fault Indicator with Reset Button			
Manual Button Designation	Nominal Trip Rating	Options	
MB	0200	200 A	— Outside Diameter Cable Clamping Range of 0.6" to 1.4"
	0300	300 A	L Outside Diameter Cable Clamping Range of 0.8" to 2.0"
	0400	400 A	
	0450	450 A	
	0800	800 A	

Example part number: MB0300L

The example part number is for an MR with a reset button, 300 A nominal trip, and an outside diameter cable clamping range of 0.8" to 2.0".