

PLUG CONFIGURATION TABLE

Pole #	1	2	3	4	5	6
Configuration Number						
SP01		V	X	X	X	X
SP02		S	X	X	X	X
SP03		T	X	X	X	X
SP04		C — C	X	X	X	X
SP05		V	V	V	X	X
SP06		V	V	V	V	X
SP07		C — C — C — C			X	X
SP08		C — C	C — C		C — C	

- C CURRENT
- V VOLTAGE
- S SIGNAL/TRCP
- T TEST SIGNAL
- X NOT POPULATED
- SHORTING BRIDGE