

SEL-351R-4

Recloser Control, Standard with Load Profile and MIRRORRED BITS, Integration Enhancements, Counters, Phantom Voltages, ACSELEATOR QuickSet® SEL-5030 Software Support⁽¹⁾, with 8 Outputs, 6 Inputs, Plug-In Screw Terminal Connectors, and Phase Rolling.

Part Number:

0 3 5 1 R 4 1 8 1

Firmware

Standard

Power Supply

120/230 Vac or 125/250 Vdc with Integral Battery Charger

Secondary Input Voltage

Single Phase Only (300 Vac maximum)

V1, V2, V3, and VS (300 Vac maximum, phase-neutral, wye)*

Secondary Input Current

1 Amp Phase, 0.05 Amp Neutral (Includes Sensitive Earth Fault Detection)

Control Input Voltage⁽²⁾

24 Vdc

24 Vdc, Out 103 & Out 104 Type B

48 Vdc

125 Vdc

250 Vdc

Communications Port

(3) EIA 232

(3) EIA 232, (1) EIA 485*

Communications Protocol

SEL ASCII, SEL Distributed Port Switch Protocol (LMD), SEL Fast Meter, SEL Fast SER, SEL Compressed ASCII and DNP3 Level 2 Slave

User Interface

Operator Controls, LCD and Targets

Operator Controls, LCD and Targets - Configurable Labels^{(3)*}

Conformal Coat

None

Conformal Coated Circuit Boards*

Enclosure

No Enclosure, Relay Module Only⁽⁴⁾

Painted Aluminum w/Standard Outlet

Painted Aluminum w/No Outlet

Painted Aluminum w/GFCI Outlet^{(5)*}

Installed Accessories⁽⁶⁾

None

*Additional Cost

⁽¹⁾Download ACSELERATOR QuickSet SEL-5030 software for free at <https://www.selinc.com/software/solutions/>. ACSELERATORQuickSet on CD (503001WX4) is available upon request.

⁽²⁾The control inputs (IN101-IN106) are not used in the factory-set logic in the SEL-351R (configured as a traditional recloser control). Use these extra inputs for logic additions/changes. If using the 24 Vdc from the SEL-351R to wet these extra inputs, select 24 Vdc (Control Input Voltage option code 1). Otherwise, select the Control Input Voltage that corresponds to the applied external voltage. OUT101-107 are Type A unless otherwise specified.

⁽³⁾For model numbers specifying "Configurable Labels", a configuration kit (9260001) is provided (packaged in the shipping box).

⁽⁴⁾Reduced Base Price.

⁽⁵⁾Use the 120 Vac, 60 Hz nominal input power only. Any other voltage or frequency may damage GFCI outlet.

⁽⁶⁾Enter these two-digit Accessory Codes in the last two columns of the part number for accessories to be installed at the SEL factory.

⁽⁷⁾These accessories have full, independent part numbers given and are not installed at the SEL factory. Use these part numbers to order accessories separately for installation by the customer.

Note: The SEL-351R comes standard with a CD manual. A printed instruction manual is available upon request.

Making Electric Power Safer, More Reliable, and More Economical[®]

SEL SCHWEITZER ENGINEERING LABORATORIES, INC.

2350 NE Hopkins Court - Pullman, WA 99163 USA
Phone: +1.509.332.1890 - Fax: +1.509.332.7990