

SEL-352-1, -2, -3

Breaker Failure Relay
Standard with 8 Outputs, 6 Inputs
Conventional Terminal Blocks



2350 NE Hopkins Court • Pullman, WA 99163-5603 USA
Phone: (509) 332-1890 • Fax: (509) 332-7990
Internet: www.selinc.com • E-mail: info@selinc.com

Ordering Information

Note: This is a two-page document.

Part Number Example: 035211221H2X3XX

Choose from the following options.
Enter option codes to complete the part number.

0 3 5 2

Page 1						Page 2	

Enter option codes from page 2 in the shaded spaces above.

Firmware⁽¹⁾

Option Codes

Standard, with Enhanced SELoGic [®] Control Equations	1										X
Standard plus RMS Overcurrent Element and Breaker Wear	2										
Standard plus RMS Overcurrent Element, Breaker Wear and DC Voltage Monitoring	3										

I/O Board; Chassis⁽¹⁾

No Additional I/O, 2U		0					X	X				
Additional 16 Outputs with Commons, 8 Inputs, 3U	*	1					1	X				
Additional 12 Std Outputs, 8 Inputs, 3U	*	1					2	X				
Additional 4 Std Outputs, 16 Inputs, 3U	*	1					4	X				
Additional 8 Fast High I/C Outputs, 8 Inputs, 3U	*	1					5	X				
Additional 12 High I/C Outputs, 8 Inputs, 3U	*	1					6	X				
Additional 32 Outputs with Commons, 16 Inputs, 4U	*	2					1	1				
Additional 16 Outputs with Commons, 4 Std Outputs, 24 Inputs, 4U	*	2					1	4				
Additional 16 Outputs with Commons, 8 Fast High I/C Outputs, 16 Inputs, 4U	*	2					1	5				
Additional 16 Std Outputs, 24 Inputs, 4U	*	2					4	2				
Additional 8 Std Outputs, 32 Inputs, 4U	*	2					4	4				
Additional 16 Fast High I/C Outputs, 16 Inputs, 4U (not available in the SEL-352-1)	*	2					5	5				
Additional 24 High I/C Outputs, 16 Inputs, 4U	*	2					6	6				

Power Supply

24/48 Vdc						2						
48/125 Vdc or 125 Vac						3						
125/250 Vdc or Vac						4						

Secondary Input Voltage; Current⁽¹⁾

150 Vac Maximum Phase-Neutral (Wye), 1 Amp Phase						2	1					
150 Vac Maximum Phase-Neutral (Wye), 5 Amp Phase						2	5					

Mounting

Horizontal Rack Mount								H				
Horizontal Panel Mount								3				
Horizontal Projection Panel Mount	*							5				

Conformal Coat

None												X
Conformally Coated Circuit Boards	*											2

* Additional Cost

⁽¹⁾ 2 or more option codes per line are grouped and must be entered together.

Note: The SEL-352-1, -2, -3 comes standard with a CD manual. A printed instruction manual is available upon request.

Choose from the following options.
Enter option codes to complete the part number.

0 3 5 2

Enter option codes in white spaces. Transfer to shaded spaces on page 1.

Control Input Voltage

24 Vdc															7		
48 Vdc															3		
110 Vdc															8		
125 Vdc															4		
250 Vdc															6		

Communications Protocol

Standard																		X
Standard plus DNP 3.00 Level 2 Slave (not available in the SEL-352-1)																		1

* Additional Cost