

Overview

The SEL-2411 Configurable Labels Kit (shipped with each device) provides the materials and information needed to customize the front panel. *Figure 1* shows the location of the pocket area and opening.

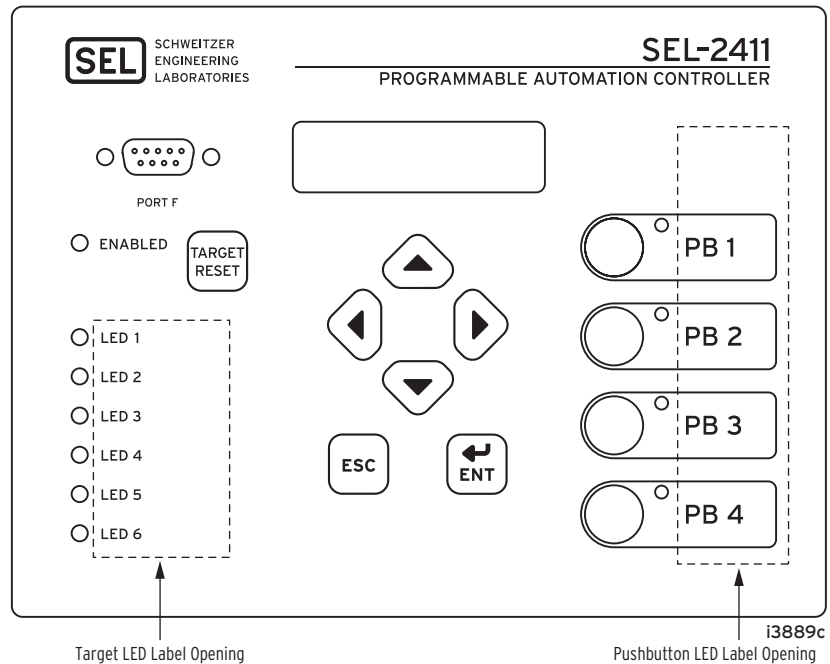


Figure 1 SEL-2411 Configurable Labels Area With Factory Default Labels

Use SELOGIC[®] control equations and slide-in configurable front-panel labels to change the function and identification of the Target LEDs. Images of the configurable labels and the label removal tool are shown in *Figure 2*.

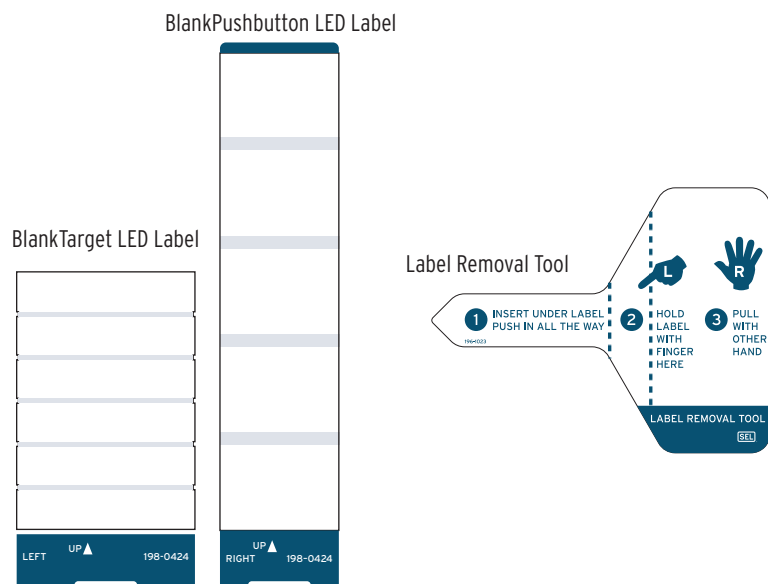


Figure 2 Blank Slide-In Label and Label Removal Tool

Table 1 provides a list and description for the items contained in the configurable labels kit. Table 2 describes the configuration options.

Table 1 Configurable Front-Panel Label Kit (Part No. 9260024)

Content Description	Quantity	Part Number
SEL-2411 Product Literature CD	1	PM2411-01-CD
Blank Customer Labels on perforated paper for laser printing (4 sets per page, 2 labels per set)	5 pages of labels	198-0422
Blank slide-in labels for labeling by hand (use only a fine-point permanent marker)	Two sets (2 labels per set)	198-0424
Label Removal Tool	One tool	196-1023

Configurable Front-Panel Labels Options

There are three options for SEL-2411 front-panel labels:

- Factory default label
- Handwritten customized label
 - > use the back side of the factory default label
 - > use blank labels provided in the kit
- Label printed on perforated paper labels in laser printer

The SEL-2411 ships with a factory default label and settings. To change the front-panel factory default label, examine and modify device settings. Verify that any customized label matches device programming.

Table 2 illustrates one possibility for each option. You can program front-panel functions to any device-supported control or device function. Check any label change against relay programming to confirm that the new label and relay functioning match.

Table 2 Options for Configurable Front-Panel Label (Sheet 1 of 2)

Default Label	
Use the default label supplied with the relay.	See Figure 1.
Handwritten Label: Reusing a Factory Default Label	
<ul style="list-style-type: none"> ➤ Use the Label Removal Tool to remove the factory default label from the front panel. ➤ Write on the backside of the label with a fine-point permanent marker. ➤ Reinsert the modified label in the appropriate pocket; be sure to fully seat the label in the pocket. 	Factory Default <input type="radio"/> LED 5 <input type="radio"/> LED 6 Custom <input type="radio"/> FAN 1 <input type="radio"/> FAN 2
Handwritten Label: Using a Blank Label	
<ul style="list-style-type: none"> ➤ Write on the blank label with a fine-point permanent marker to create a handwritten label. ➤ Use the Label Removal Tool to remove the factory default label from the front panel. ➤ Insert the handwritten label in the appropriate pocket; be sure to fully seat the label in the pocket. 	Custom <input type="radio"/> FAN 1 <input type="radio"/> FAN 2

Table 2 Options for Configurable Front-Panel Label (Sheet 2 of 2)

Laser-Printed Labels: Using a Perforated Paper Label	
<ul style="list-style-type: none"> ➤ Create a label on a computer with the Microsoft® Word templates located on the SEL-2411 Product Literature CD. See <i>Creating Laser-Printed Labels</i>. ➤ Print to a laser printer on the Customer Label Templates perforated paper. ➤ Use the Label Removal Tool to remove the factory default label from the front panel. ➤ Insert the laser-printed label in the appropriate pocket; be sure to fully seat the label in the pocket. 	Factory Default
	<input type="radio"/> LED 5
	<input type="radio"/> LED 6
	Custom
	<input type="radio"/> FAN 1
	<input type="radio"/> FAN 2

Removing Configurable Front-Panel Labels

Use the Label Removal Tool (shown in *Figure 2*) and the following procedure to remove slide-in labels from the front-panel pocket:

- Step 1. Push the existing label all the way inside the label pocket.
- Step 2. Slide the tip of the tool under the label at the label pocket opening (see *Figure 1* for opening locations).
- Step 3. Push the exposed edge of the label against the **Label Removal Tool** while pulling out the combined label and **Label Removal Tool** to extract the label.

Creating Laser-Printed Labels

The purpose of this procedure is to create laser-printed configurable front-panel labels on blank Customer Label Templates (supplied in the kit). The source for label template files is the SEL-2411 Product Literature CD. In addition, you can find these files on the SEL website at www.selinc.com.

NOTE: The template is a Word 2000 file. The default template font is Arial. You can use this font or choose a different font that is available on your computer system.

- Step 1. Insert the SEL-2411 Product Literature CD in your computer CD drive.

A Microsoft® Internet Explorer window will automatically open.

- Step 2. Save the Microsoft Word configurable label template file to your hard drive.
 - a. Click on the View the Microsoft Word Configurable Label Template link.
 - b. Save the file to a location on your hard drive (**File > Save As**).

- Step 3. Edit the new document to create custom labels.

- a. Use the Tab and Arrow keys or your mouse to move from cell to cell. Field space is limited; only the text that displays on the screen prints on the label.
- b. Fill in the table cells in the appropriate positions.
- c. Save the file often to preserve your work in progress.

- Step 4. When all necessary entries are complete, save the file.

NOTE: You can adjust the font size to accommodate more text within the cell.

NOTE: If your printer has duplex capability, be sure to set the printer to print single sided.

- Step 5. Test the position of the label text by printing the template file to plain paper.
- From the document, select **File > Print > OK**.
 - Examine the printed sheet for proper alignment. Carefully compare the printed page to the perforated stock sheets.
 - If the printed sheet is not aligned properly, proceed to *Step 6*.
 - If the labels appear as desired, proceed to *Step 7*.
- Step 6. Make adjustments to margin settings, as necessary, to print in the proper location on the test sheet.
- Use the **File > Page Setup** menu to adjust *only* the top or left margins as needed to correct the alignment.
DO NOT adjust the right or bottom margins.
 - Do a test print on plain paper.
 - Examine the label positions.
 - Repeat as necessary until the alignment is correct.
- Step 7. Save the document.
- Step 8. Print the labels on the perforated stock sheets.
If the labels are incorrect, repeat this procedure beginning with *Step 3*.
- Step 9. Fold and tear the perforated edges of the stock paper to remove the label from the sheet.
- Step 10. Remove the existing label from the front-panel label pocket with the Label Removal Tool.
- Step 11. Insert the newly created label in the pocket on the relay front panel.
To change the labeling again, remove the existing label and repeat the procedure.

NOTE: Place the perforated stock sheet in the printer tray as indicated by the printer (face up or face down).

Factory Assistance

We appreciate your interest in SEL products and services. If you have questions or comments, please contact us at:

Schweitzer Engineering Laboratories, Inc.
2350 NE Hopkins Court
Pullman, WA 99163-5603 USA
Telephone: +1.509.332.1890
Fax: +1.509.332.7990
Internet: www.selinc.com

© 2006-2007 by Schweitzer Engineering Laboratories, Inc. All rights reserved.

All brand or product names appearing in this document are the trademark or registered trademark of their respective holders. No SEL trademarks may be used without written permission. SEL products appearing in this document may be covered by US and Foreign patents.

Schweitzer Engineering Laboratories, Inc. reserves all rights and benefits afforded under federal and international copyright and patent laws in its products, including without limitation software, firmware, and documentation.

The information in this document is provided for informational use only and is subject to change without notice. Schweitzer Engineering Laboratories, Inc. has approved only the English language document.

This product is covered by the standard SEL 10-year warranty. For warranty details, visit www.selinc.com or contact your customer service representative.

SCHWEITZER ENGINEERING LABORATORIES

2350 NE Hopkins Court • Pullman, WA 99163-5603 USA
Phone: +1.509.332.1890 • Fax: +1.509.332.7990
Internet: www.selinc.com • E-mail: info@selinc.com

